



top of the alarm to acknowledge and stop the siren. The following 10 minutes, it will block alarms, allowing time to ventilate the smoke.

LOW BATTERY MODE

Simultaneous audible signals and front LED flashes every 45 seconds means that the battery should be replaced.

REPLACE DEVICE MODE

When audible signals and front LED flashes are not simultaneous, the device should be replaced. The life expectancy of Intelligent Smoke Alarms is generally 10 years, after which their sensors begin to lose sensitivity.

Fault finding & cleaning

- Dust particles in the smoke chamber can be removed by vacuuming the mesh.
- High humidity condensing can be resolved by drying the Intelligent Smoke Alarm.
- If the Intelligent Smoke Alarm does not work when the test button is pushed, the probable cause is a faulty battery. Replace the battery if it is worn out.
- In case of a bad or weak signal, change the location of the Intelligent Smoke Alarm. Otherwise, you can relocate your gateway or strengthen the signal with a smart plug.
- If the search for a gateway has timed out, a short press on the LED button will restart it.

Battery replacement

CAUTION: RISK OF EXPLOSION IF BATTERIES ARE REPLACED BY AN INCORRECT TYPE. DISPOSE OF THE BATTERIES IN ACCORDANCE WITH INSTRUCTIONS.

CAUTION: When removing cover for battery change - Electrostatic Discharge (ESD) can harm electronic components inside.

1. To replace the battery, detach the Intelligent Smoke Alarm from the mounting base by twisting counter-clockwise.
2. Replace the battery respecting the polarities. The Intelligent Smoke Alarm uses 3CR123 battery.

m.



3. Attach the alarm in the mounting base by twisting clockwise until it clicks, and test the alarm.

n.



Disposal

Dispose the product and battery properly at the end of life. This is electronic waste, which should be recycled.

Other information

- Note local country regulations regarding installation of mains powered alarms in new buildings.
- Note local regulations about information to your insurance company regarding installed Intelligent Smoke Alarms.

CE certification

The CE mark affixed to this product confirms its compliance with the European Directives which apply to the product and, in particular, its compliance with the harmonized specifications of standard EN14604:2005/AC:2008 relating to Construction Products Regulation 305/2011.

IN ACCORDANCE WITH THE DIRECTIVES

- Radio Equipment Directive (RED) 2014/53/EU
- RoHS Directive 2015/863/EU amending 2011/65/EU



1116

EN14604:2005 + AC:2008
DUP no. - Reinforcement

The paper version of the DUP is available free of charge on request.
Declared performance 4.14.4.195.2.2.24 Passed
Download DUP document: www.frient.com

Other certifications

Zigbee 3.0 certified.



All rights reserved.

frient A/S assumes no responsibility for any errors, which may appear in this manual. Furthermore, frient A/S reserves the right to alter the hardware, software, and/or specifications detailed herein at any time without notice, and frient A/S does not make any commitment to update the information contained herein. All the trademarks listed herein are owned by their respective owners.

Copyright © frient A/S

Distributed by frient A/S
Tangen 6
8200 Aarhus N
Denmark
www.frient.com

Intelligent Smoke Alarm manufactured by
CAVIUS Aps
Julsøvej 16
8660 Silkeborg
Denmark.
Manufactured in P.R.C.

frient®

CE-SERTIFISERING

CE-merket på dette produktet bekrefter at det er i samsvar med EU-direktivene som gjelder for produktet, spesielt at det er i samsvar med de harmoniserte standardene og spesifikasjonene.

I OVERENSSTEMMELSE MED DIREKTIVENE

- Radiodirektivet (RED – Radio Equipment Directive), 2014/53/EU
- RoHS-direktiv 2015/863/EU – endring av 2011/65/EU

SE - Installationsmanual

FÖRSIKTIGHETSÅTGÄRDER

- Ta inte bort produktetiketten. Den inneholder viktig informasjon.
- Måla inte på larmet.
- Undvik att placera larmet i dammiga rum.
- Placera inte larmet i ett kök, garage eller på andra steder där fukt, gasser eller rök är vanlig forekommande.

KOMMA IGÅNG

Dra ut isoleringsremsan for batteriet (se figur a). När lysdioden blinkar rött søker larmet efter ett nätverk (se figur b). Kontrollera att Zigbee-nätverket är öppet for anslutande enheter. När lysdioden slutar blinka är larmet ansluten.

PLACERING

Takplacering

Placera brandlarmet minst 50 cm från väggen (se figur e).

Väggplacering

Placera brandlarmet minst 30 och 50 cm från taket (se figur f).

Minst ett brandlarm måste finnas på varje våning och det får vara högst 10 meter mellan dem (se rekommenderad placering i figur d och figur g).

MONTERING

Lossa larmet från monteringsplattan genom att vrida moturs. Montera monteringsplattan (se figur i). Fäst larmet genom att vrida det medurs tills det klickar på plats (se figur j).

TEST

- Testa larmen en gang i veckan for å kontrollere at de fungerer korrekt.
- Når du trykker på larmknappen ska du høre larmlydet.
- Gör ett test med nätverkslarm genom å hålla nere larmknappen i minst 6 sekunder (se figur k).

ÅTERSTÄLLNING

Lossa larmet från plattan. Håll nere lysdiodknappen tills den blinkar oavbrutt (se figur l). När lysdioden blinkar rött är återställningen klar.

LÄGEN

- Söka gateway: den bakre lysdioden blinkar rött en gang i sekunden.
- Normalt läge: den främre lysdioden blinkar var 45:e sekund.
- Utlöst larm: den främre lysdioden blinkar och larmet lyder. Tryck på "button/top" (knapp/övre) for å stoppe lydet. Larmen blockeres då i 10 minutter.
- Lågt batteri: lydssignaler hörs samtidigt som den främre lysdioden blinkar var 45:e sekund.

BATTERIBYTE

Lossa brandlarmet från monteringsplattan. Byt ut batteriet (se figur m). Ett 1xCR123-batteri ska användas i brandlarmet. Fäst larmet på monteringsplattan (se figur n).

CE-CERTIFIERING

CE-märkningen på den här produkten bekrefter at produkten overensstemmer med de europeiske direktiven som gjelder produkten og i synnerhet at produkten overensstemmer med harmoniserte standarder og spesifikasjoner.

I ENLIGHET MED DIREKTIVEN

- Radioutrustningsdirektivet 2014/53/EU
- RoHS-direktiv 2015/863/EU ändring av 2011/65/EU